

Quick Installation Guide

HALNy GPON ONT

HL-4BX3V-F



1 Safety guidance

1.1 Safety check

Before installing the device, you must check the following items.

1.1.1 Electric safety

- Ensure that there are no inflammable, conductive or moist objects around. Check whether the cables are aged and whether other electrical appliances are placed stably.
- check whether the alternating or direct input current is within the allowed range of the device, whether the polarity of the direct current is correct, and whether the earth line is properly connected.

1.1.2 Device position

- Because the running electric device easily generates heat, please ensure to place the device in a well-ventilated environment.
- avoid direct sunshine and do not place the device on a PC case.
- keep the device away from heat and water.
- check whether power supply is available. The input voltage fluctuation range must be smaller than 10%. The power plug should not share one socket with a hair drier, an iron or a refrigerator.

1.2 Safety caution

- Read the quick installation guide carefully before using the device.
- note all cautions in the quick installation guide.
- do not use any accessory that does not belong to the device without prior consent of the manufacture, as it may cause fire or product damage.
- use the power adapter accompanied in the package.
- do not place any object on the device.
- keep the device dry, ventilated, rainproof and clean.

- during lightning weather, unplug the power plug and all connection cables, to protect the device against lightning.
- clean the device using a soft and dry cloth rather than liquid or atomizers. Power off the device before cleaning it.
- power off the idle device.
- keep the ventilation hole clean and prevent any object from dropping into the device through it. Otherwise, it may cause short circuit and further cause device damage or fire. Do not spray liquid on the surface of the device.
- do not open the case of the device, especially during device power-on,
- before plugging or unplugging the power, ensure that the power is off, thus avoiding surge.
- be careful when unplugging the power, as the transformer may be very hot.
- cover the optical interface with fiber interface cap when it is not in use. Avoid direct eye exposure to the laser emitted from the optical interface. Wear safety glasses if possible, to protect your eyes.



Caution:

Please read the above safety guidance carefully before device use. Users should assume responsibilities for any accidents due to non-compliance with the above instructions.

2 Overview

This chapter mainly describes functions and the structure of the device.

2.1 Features and Function

- Fast rate. Support up to 1.25Gbps uplink and 2.5Gbps downlink data transmission rates.
- strong maintainability. Provide various statuses of LED indicators, to help troubleshooting.
- long transmission distance, up to 20 km.

2.1 Front Panel



Fig1. Front Panel

On the front panel a row of LEDs is placed. Those LEDs allows you to easily check the status of the device and it's interfaces.

| LED | Kolor | Status | Opis |
|--------|-------|--------|------------------------------|
| POWER | Green | On | Power is ON. |
| | | Off | Power is OFF / Faulty PSU. |
| PON | Green | Blinks | Device detected by OLT. |
| | | On | Device registered by OLT. |
| LOS | Red | Blinks | No connection with OLT. |
| | | Off | Active connection with OLT. |
| NET | Green | On | Network access. |
| | | Off | No network access. |
| LAN1-3 | Green | On | Ethernet link up. |
| | | Blinks | Data transmission. |
| | | Off | Ethernet link down. |
| 2.5G | Green | On | Ethernet link up. |
| | | Blinks | Data transmission. |
| | | Off | Ethernet link down. |
| TEL | Green | On | VoIP account registered. |
| | | Blinks | Active call. |
| | | Off | VoIP account not registered. |
| 2.4G | Green | On | WiFi interfaces enabled. |
| 5G | | Blinks | Data transmission. |
| | | Off | WiFi interfaces disabled. |
| WPS | Green | On | WPS enabled. |
| | | Blinks | Pairing in progres. |
| | | Off | WPS disabled. |

Table 1.ONU LED indication table

Quick Installation Guide

| LED | Kolor | Status | Opis |
|-----|-------|--------|----------------------------------|
| WPS | Green | On | Got WAN IP address successfully. |
| | | Blink | Connecting with controller. |
| | | Off | Device in bridged mode or no IP. |

Table 2.ONU LED indication table for Easy Mesh agent mode

| LED | Kolor | Status | Opis |
|------|-------|--------|--|
| 2.4G | Green | On | The connection of Ethernet interface is normal. |
| | | Blink | Initialization of adding a agent. |
| | | Off | The connection of the Ethernet interface fails to establish. |
| 5G | | On | The connection of Ethernet interface is normal. |
| | | Blink | Initialization of adding a agent. |
| | | Off | The connection of the Ethernet interface fails to establish. |
| WPS | | On | Pairing ok. |
| | | Blink | Initialization of adding a agent. |
| | | Off | Not activated/not triggered. |

Table 3.ONU LED Indication Table for Easy Mesh controller mode

2.2 Rear Panel

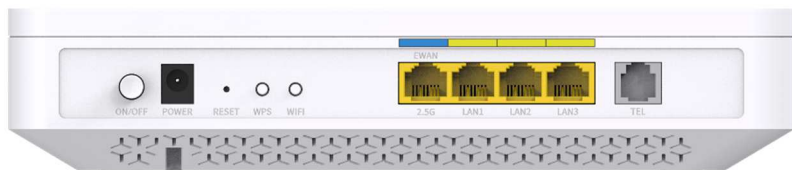


Fig2. Rear Panel

ONU rear panel description:

| | Function |
|--------|---|
| ON/OFF | Device power ON/OFF button. |
| POWER | PSU socket. |
| RESET | Press and hold the button for at least 30 seconds (and no longer than 40 seconds) to restore the device to factory settings. |
| WPS | Hold for 5s to activate WPS If MESH is enabled, press for 10 seconds to activate MESH pairing. In MESH mode, WPS pairing is disabled. |
| WIFI | Hold for 5s to activate/deactivate WiFi. |
| 2.5G | Ethernet socket (RJ45). |
| LAN1-3 | Ethernet socket (RJ45). |
| TEL | Phone socket (RJ11). |


Table 4.Rear panel port description

3 ONU installation

The chapter describes the required installation operations before you use the device for the first time.

3.1 Product networking application - FTTH

Fiber to the Home (FTTH) means to install the ONU to residences or enterprise buildings. The optical line terminal (OLT) is placed in the central equipment room. The ONU can be placed in the home of a user, or it can provide connection for the user through the Ethernet interface, according to the user requirement. The OLT connects to the ONU with an optical distributor in the point-to-multipoint way. See the following figure.

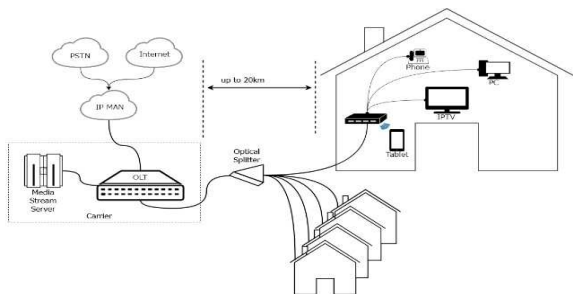

Caution:

ONU can be placed in a room or the corridor. Because installation and cabling in the corridor are relatively complex, let the professional engineers deploy according to the actual situation. This manual describes the procedure for installing the device at home, and is for reference only.

3.2 Connecting ONU



3.2.1 Wiring connection and power on

1. Connect fiber optical cable (ended with AC/APC plug) to the optical port located on the bottom of the device.
2. You can connect an Ethernet devices to LAN1-LAN3 or 2.5G sockets (ex.computer with wired NIC, printer, gaming console, set-top-box, TV, etc.)
3. You can connect a phone to TEL socket
4. Plug in the PSU plug to the POWER socket. Before you install the PSU please make sure the ON/OFF button is in OFF position
5. Connect the PSU to the power grid socket
6. Turn on the device by pressing the ON/OFF button.



Caution:

When a fiber is not in use, ensure to cover the optical interface of the ONU and the dust cap of the optical fiber. Prevent grease, dust pollution or water immersion, which may lead to unavailable fiber and optical interface of the device. If fibers need to be fixed or bended during cabling, do not fasten the fibers too tight. Avoid fiber extrusion, which may lead to increase of fiber material or unavailable fiber.

4 Troubleshooting

| Symptom | Solution |
|--|--|
| The POWER indicator is not on | <ul style="list-style-type: none"> ● Check whether the power connection is correct, ● check whether the power adapter matches the device. |
| The PON indicator is not on | <ul style="list-style-type: none"> ● Check whether the SN of ONU matches OLT, ● check whether the optical attenuation is in the normal range. |
| The LOS indicator is on | <ul style="list-style-type: none"> ● Check whether the optical fiber cable is properly inserted, ● check whether the optical fiber connector is clean. |
| The LAN and 2.5G indicators are not on | <ul style="list-style-type: none"> ● Check whether the PC NIC is enabled, ● check whether the network cables included in the device package are used, ● check whether the network cable connection is normal, ● check whether the LED for your corresponding LAN or 2.5G port is on, ● check whether the network adapter works in the normal state. |

5 Technical specification

| Main technical specifications | | |
|---|--------------------------|---|
| Standard | GPON | ITU-T G.984 |
| Rate | Uplink | 1.25Gbps |
| | Downlink | 2.5Gbps |
| Interface | 1 WAN port | SC/APC, Single Mode optical fiber |
| | 1 2.5G port | 2500Base-T (RJ45) |
| | 3 LAN ports | RJ-45 10/100/1000Mbps, auto-MDI/MDIX |
| | 1 POTS port | RJ-11 FXS |
| | WiFi 2.4Ghz WiFi 5Ghz | 802.11n/ax (2T2R MIMO) 576Mbps 802.11ax (2T3R MIMO) 2402Mbps |
| Physical characteristics and environment requirements | | |
| Power adapter input | | 100V~240V AC, 50Hz~60Hz |
| Whole-device power supply | | 12V DC, 1.5A |
| Standard power consumption | | <18W |
| Operating temperature | | 0°C~45°C |
| Operating humidity | | 10%~90% (non-condensing) |
| Dimension | | L x W x H: 225mm x 142mm x 46mm |
| Weight | | <500g |

Appendix a acronyms and abbreviations

| | |
|------|---------------------------------|
| GPON | Gigabit Passive Optical Network |
| FTTB | Fiber to the Building |
| FTTH | Fiber to the Home |
| OLT | Optical Line Terminal |
| ONU | Optical Network Unit |
| PON | Passive Optical Network |

Additional information:

Declaration of Conformity (CE and FCC)

This device has been tested and found to comply with the stated standards which are required by the Council Directive of 2014/30/EU and Part 15, subpart B of FCC Rules. The device complies with this CE and FCC Declaration when the installation is done in accordance with the instruction and documentation. The importer don't take responsibility for any issues caused by improper use of the device.

Documents are available on below web page or upon contact with importer:

CE / warranty terms and conditions:

www.halny.com

Importer:

FIBRAIN Sp. z o.o

36-062 Zaczernie 190F (POLAND) info@fibrain.pl

BDO: 000007477

FCC ID: 2AWIZHL4BX3VF

Information furnished by HALNy Networks is believed to be accurate and reliable. However, no responsibility is assumed by importer for its use, nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of the manufacturer. Manufacturer reserves the rights to change specifications at any time without notice.

Recycling



This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled according to European directive 2012/19/EU in order to be recycled or dismantled. This will minimize the negative effects on the environment and human health resulting from the possibility of the presence in the equipment substances, mixtures and hazardous components. A user can give the product to a competent recycling organization, to WEEE collection points or to a distributor (in accordance with local regulations).